




BECKER SWC745

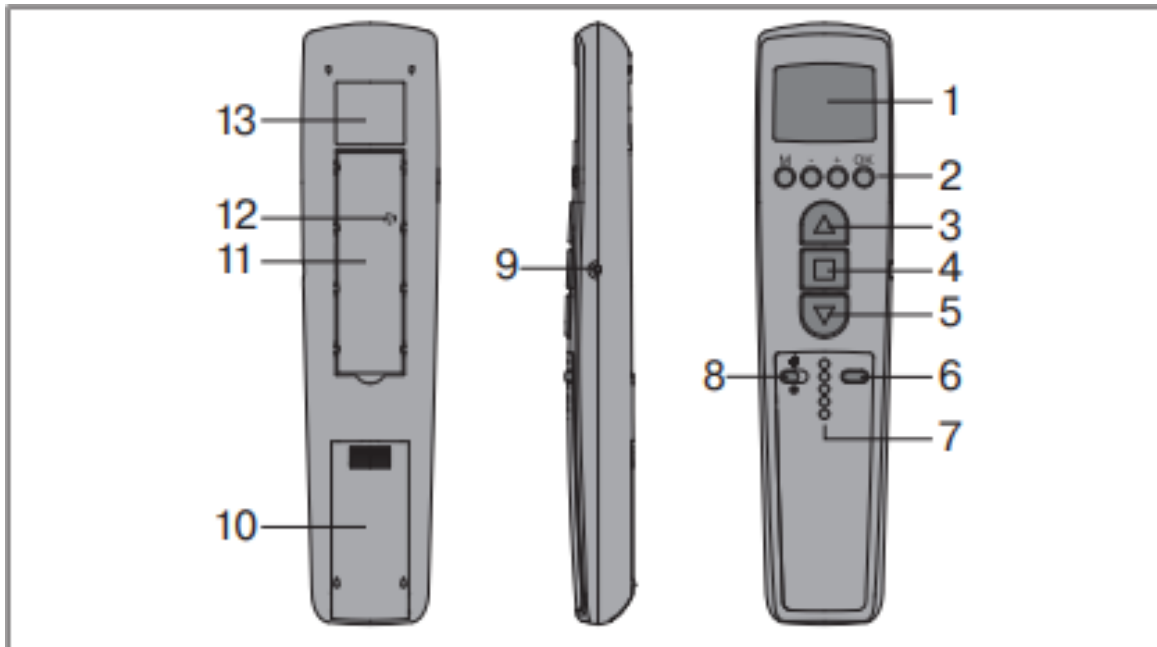

1	Display	8	Manual/Automatic slide switch
2	Menu keypad	9	Programming button
3	RETRACT button	10	Battery compartment
4	STOP button	11	Labelling field
5	EXTEND button	12	RESET button (behind the labelling field)
6	Channel selection button	13	Type plate
7	Channel indicator lamps		

Programming with the receiver:

1. Switch off the receiver's power supply and reconnect after 5 seconds OR activate the 'learn' button or the radio controlled receiver switch.
2. The receiver will be then in learn mode after 3 minutes
3. When the receiver is in learn mode, press the learn button until it indicates that the learn process has been successfully completed.
4. To program the master transmitter, press the programming button on the master transmitter whilst in programming mode until the receiver confirms that programming was successful.

On the display, "Transmit setting appears"

5. Confirm with 'OK'
6. The programming process is now complete.