



MARANTEC Digital 211, 212, 221, 222, 224, 231 and 232

Programming with a working remote control:

1. Connect both hand transmitters with the programming cable supplied.
2. Actuate the existing remote control and hold the button down. The LED on the transmitter will flash.
3. Actuate the button of the new remote control that you want to program while holding the button of the existing remote control down. The LED on the new transmitter flashes rapidly.
4. After 2 seconds, the LED on the new transmitter will flash.
5. Your new remote control is programmed.
6. Now you can remove the programming cable.

Repeat the process to program other buttons.