

INSTRUCTIONS

MARANTEC D302 - D304 - D306 - D313 - D321 - D323 - D382- D384 E-KING 868 - 433

Programming with the receiver:

Use this process if you no longer have a working remote control. This method will delete all the existing programmed remote controls.

- 1. Press and hold down the button P until the LED light 2 flashes
- 2. Press the button P several times until the LED light 7 flashes
- 3. Press the button on your new remote control. The LED 7 blinks more quickly
- 4. Press the button P and release it. Wait ten seconds
- 5. Your new remote control is programmed

Visit our website: www.alloremotecontrol.com

Programming with an already-programmed remote control:



- 1. Plug a wire plug into your existing remote control (It must be in good working order)
- 2. Find the three holes in the side of your remote
- 3. Insert the three-pin plug in your existing remote control
- 4. Plug your new remote on to the three pins and make sure that the two remotes are entirely connected
- 5. Press a button on your existing remote control and hold it in until the red light flashes
- 6. Press the button on your new remote control (the one you want to program) and