



BENINCA TOGO2WV, TOGO4WV

1. Take an existing working remote control and your new remote control
2. Take the back cover off the working remote, you will notice a small red button used for programming
3. To program the new remote control, press the red button on your existing working remote control and the button you normally use
4. Take your new remote control and press the button you wish to program for operating your gate system
5. Your new remote control is now programmed!