




### CARDIN S437 RECEIVER

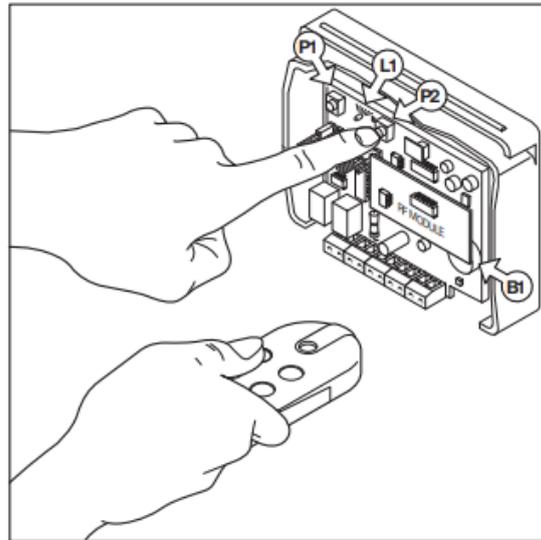

1. Keep button "**P1**" MEMO pressed down and the led "**L1**" will start to flash slowly
2. Press the channel on the transmitter which is to be memorized
3. Keep button "**P1**" memo pressed down until led "**L1**" starts to flash again Release the button and the LED continues to flash
4. Press the channel on the transmitter which is to be memorized again ( If the channel or the transmitter is different you will not be able to memorise the channel)
5. LED1 will remain lit for 2 seconds which means that the channel has been successfully memorized