



ALLO
REMOTECONTROL

INSTRUCTIONS

FAAC SLR

Programming from an already activated remote control:

During programming, do not press the keys on the new remote first as this can erase the memory of your old remote control

During programming, your gate or garage door system will be opened. To minimize risks, we recommend programming your remote control inside your garage

Programming procedure:

Place your old remote and new remote head to head

Press buttons P1 and P2 on the already activated remote control, when the light flashes on the remote, release buttons

Press and hold one of the buttons on the remote that has already been programmed

Press and hold the same button on the new remote. Shortly after, you will notice that the light on your new remote control flashes twice and then goes out

Release all the buttons

Your new remote control is now programmed!

Visit our website: www.Alloremotecontrol.com