




GENIUS ECHO TX4

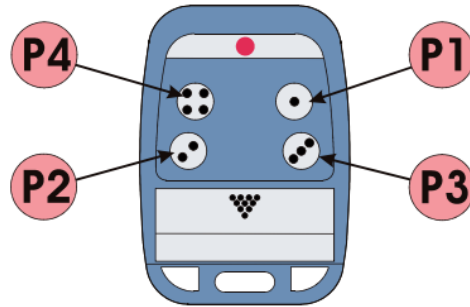

Procedure for memory storing the remote control on the receiver:

- 1) On the receiver, press the pushbutton for the channel you wish to program: SW1 to program CH1 and SW2 to program CH2. LED 1 or LED 2 will light on steady light to signal that the receiver is in learning mode.
- 2) Press on the remote control within 10 seconds and hold down the push-button you wish to memory-store for at least 1 second.
- 3) If storage was successful, the LED flashes twice.
- 4) After the first remote control has been programmed, the receiver stays in learning mode, with the LED flashing on steady light.
- 5) To memory-store successive remote controls (up to a maximum of 256), repeat the operations from point 2.
- 6) When 10 seconds have elapsed from memory-storage of the last remote control, the receiver automatically exits the learning stage.

You can exit the learning procedure manually; by pressing one of the push-buttons on the receiver (SW1 or SW2) after the remote control has been stored.