



### Marantec D304-868/ ALULUX 868-2

Press and hold the top two buttons of the new remote. The LED light will flash 3 times. Keep holding both buttons.

While still holding the top button, release the second button and press it 3 times, the LED will flash

Place your original remote and your new remote control close to each other

Press and hold the button you would like to program on your new remote control for monitoring your system, the LED will flash 3 times

While still holding that button on your new remote control, push and hold the same button on your original remote control  
The LED on the new remote control is on (constantly)

Your new remote control is now programmed