



Prastel BFOR

CHANNEL SELECTION:

1. For channel 1 press button 1, for channel 2 press button 2 (fig.1)
 2. For channels 3 and 4 press the central button (fig. 1): the red LED lights up. Within 3 seconds press button 1 to send the 3rd channel or button 2 to send the 4th channel.
- N.B.: The transmission of channels 1 and 2 is signalled by the green LED and 3 and 4 by the red LED.

ENTERING THE TRANSMITTER IN THE MEMORY OF THE RECEIVER:

1. Press the programming button on the receiver; the red LED lights up.
2. Press the button corresponding to the transmitter channel to be memorised; the code is set in memory. During the insertion, the receiver LED flashes for about two seconds, then returns to the steady light state to indicate that a new transmitter can be entered.
3. When the operation is completed, press the programming button on the receiver again to exit from the procedure, the LED goes out.

The exit from the procedure is automatic after 10 seconds from the last insertion of a transmitter.

REMOTE ENTERING OF NEW TRANSMITTERS IN THE MEMORY OF THE RECEIVER:

1. Approach the receiver (1-2m) with an already programmed transmitter.
2. Press buttons 1 & 2 at the same time then release them; the LED lights up and after about 2 seconds goes out.
3. When the LED lights up again, press buttons 1 & 2 at the same time again and keep them pressed until the LED starts flashing alternatively red-green.
4. At the end of flashing, the TX sends a transmission which activates the learning function of the receiver
5. The receiver waits 10 seconds for transmissions from new transmitters. Press one of the buttons of the transmitter to be learned. The receiver stores the new transmitter into its memory.
6. During the learning procedure, the 10 seconds learning timeout is restored at any new transmitter learned.

Visit our Web

CH 1



CH 2



+



CH 3



+



CH 4

Fig. 1



Fig. 2