




SOMFY CENTRALIS RTS

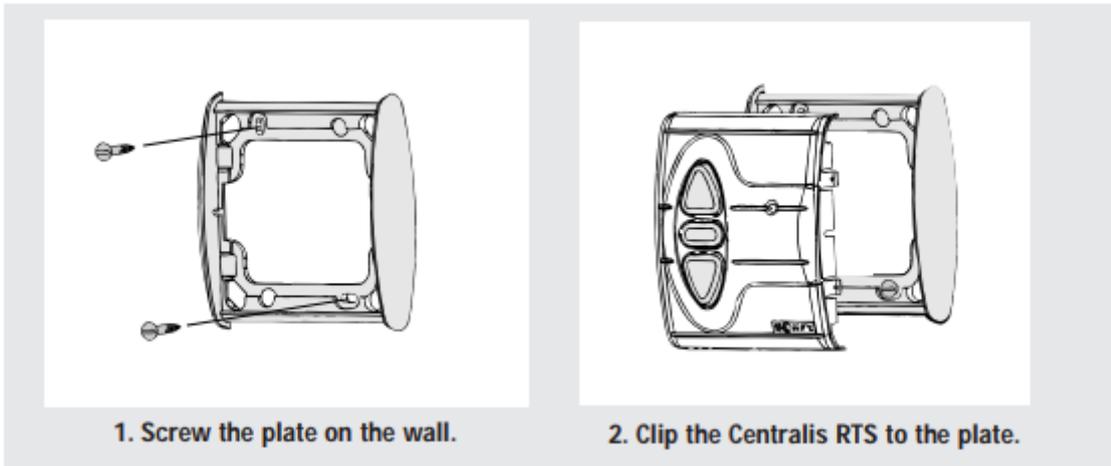

Recommendations:

Do not install the CENTRALIS RTS near or against a metallic part.
Minimum distance between the CENTRALIS RTS and the RTS receiver : 30 cm.

Initial installation:

Set the RTS receiver in its programming mode (refer to the installation guide of the concerned RTS receiver).
Press shortly the programming button on the backside of the CENTRALIS RTS
The RTS receiver emits a signal (LED or Buzzer depending on the type of receiver) indicating that the address of the CENTRALIS RTS has been memorized in the RTS receiver which automatically quit its programming mode

Multiple control:

Assign several CENTRALIS RTS to a RTS receiver following the same procedure as described above
You can assign up to 16 CENTRALIS RTS to one receiver. If you try to enter a 17th, your instruction will be ignored, the led of the receiver will go out

General or group control:

Set all the RTS receivers you wish to control by one CENTRALIS RTS in their programming mode.
Press shortly the programming button on the backside of the CENTRALIS RTS
The RTS receivers emits a signal (LED or Buzzer depending on the type of receiver) indicating that the address of the CENTRALIS RTS is memorized in all these RTS receivers

ADD A CENTRALIS RTS IN THE MEMORY OF A RECEIVER:

- Press more than two seconds on the programming button on a CENTRALIS RTS which is already memorized in the RTS receiver in order to “wake up” the receiver.

The LED of the CENTRALIS RTS lights on, indicating that all the RTS receivers which have the address of this CENTRALIS RTS are in their programming mode for **one minute**

Press shortly the programming button of the new CENTRALIS RTS you wish to assign.

The address of the CENTRALIS RTS is memorized in all the RTS receivers which automatically quit their programming mode.