



ALLO
REMOTECONTROL

INSTRUCTIONS

1. Open your new remote control and your existing (working) remote control
2. Set up the switches in the same position as in your working remote control
3. Your new remote control is now programmed

Note: For some models, you need to invert the position of the switches
And you need to remove the staple which is

Visit our website: www.Alloremotecontrol.com