





AVIDSEN 104250 BRICO

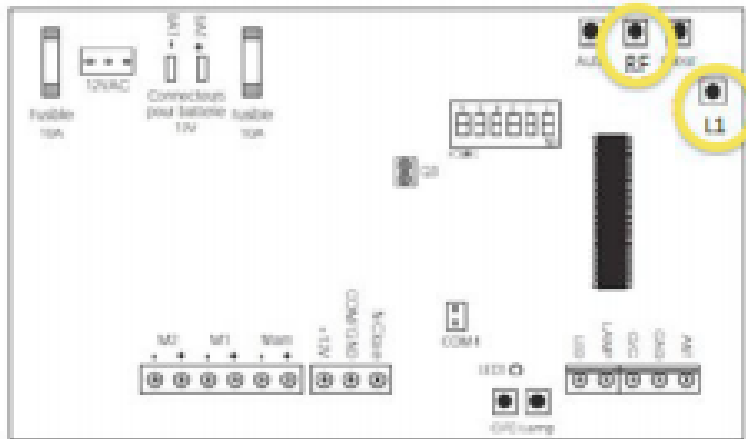

First type of receiver

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (RF). Keep it pressed down. The receiver LED light comes on (L1). Release the button
3. Within the next 10 seconds, press a button on your new remote control, release it. The receiver LED blinks.
4. Wait 10 seconds.
5. Your new remote control is programmed.

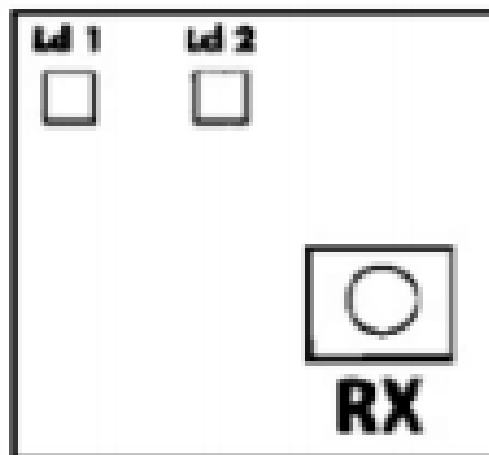

Second type of receiver:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (RX). Release the button. The receiver LED comes on. Wait 5 seconds. The receiver LED light turns off.
3. Press a button on your new remote control. Keep it pressed down. The receiver LED light turns on, Release the button
4. Wait 10 seconds.
5. Your new remote control is programmed