




### BECKER EC242

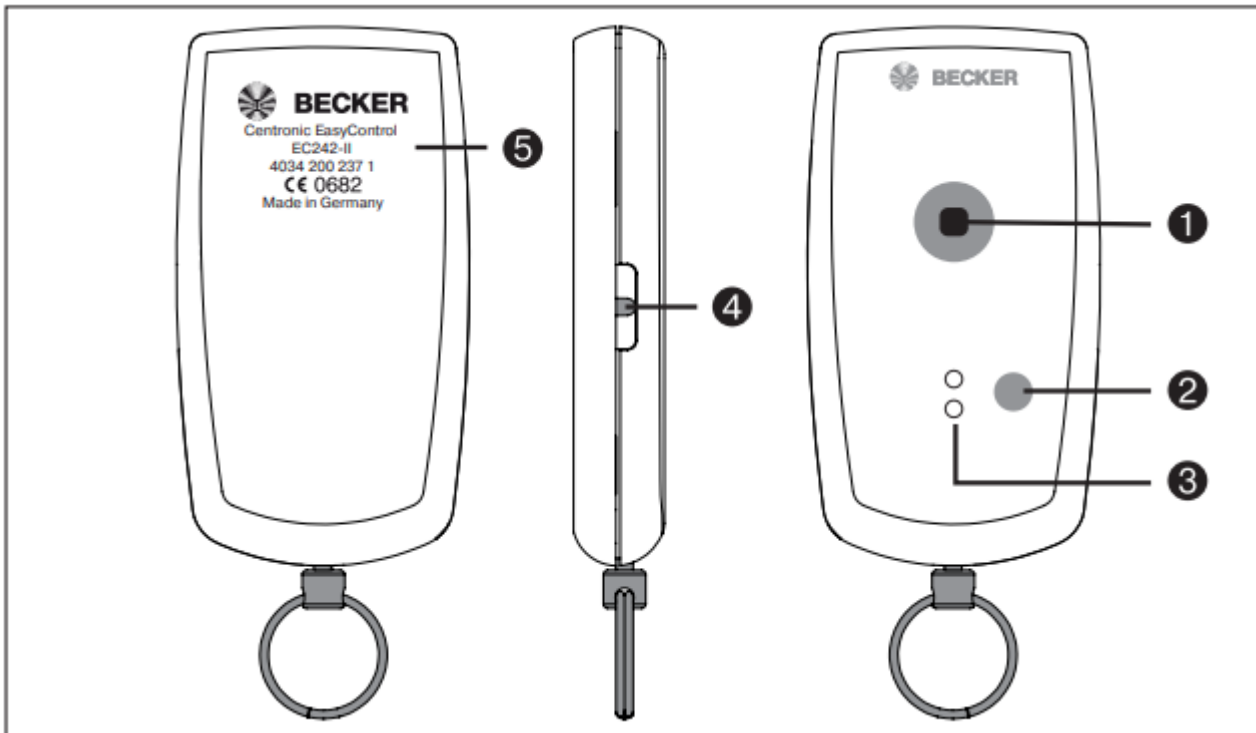

- ① Button with impulse sequence UP-STOP-DOWN-STOP
- ② Channel selection button
- ③ Channel indicator lights
- ④ Programming button
- ⑤ Type plate

## **Programming the master transmitter**

1. Switch off the power supply to the receiver for 5 seconds, then switch it back on OR operate the programming button or the radio switch of the receiver
2. The receiver is now in programming mode for 3 minutes
3. To program the master transmitter, press the programming button on the master transmitter while in programming mode until the receiver confirms that programming has been successful
4. The programming process is now complete

## **Programming additional transmitters:**

1. Press the programming button on the master transmitter until the receiver confirms
2. Press the programming button of the new transmitter until the receiver confirms
3. Press the programming button of the new transmitter again
4. The receiver confirms successful programming