




BECKER MC511

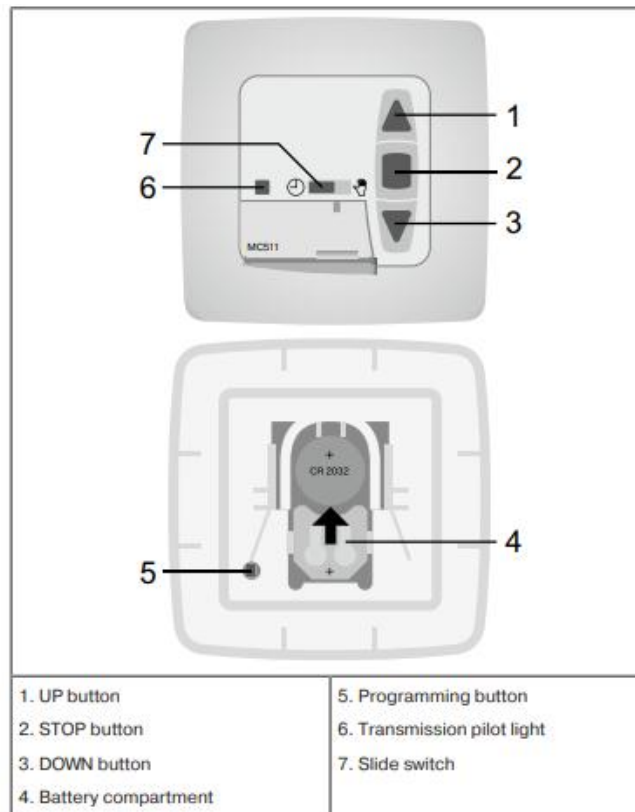

Programming the run times :

1. If necessary, run the roller shutter or blind to the opposite limit position
2. Wait for the time you wish the automatic drive command to be executed
3. At the desired time, press and hold the relevant direction button until the drive briefly after 6 seconds and then continues to the limit position
4. Release the direction button

Programming the master transmitter :

1. Press the programming button on the master transmitter while in programming mode until the receiver confirms that programming has been successful

Programming additional transmitters :

1. Press the programming button of the master transmitter until the receiver confirms
2. Press the programming button of the new transmitter until the receiver confirms
3. Press the programming button of the new transmitter again
The receiver confirms successful programming