



BERNER Remote Control

Assigning a button function:

The radio receiver has two channels for the control of two functions. Before you can use the hand transmitter(s), you must assign the desired function in the radio receiver to a button on the hand transmitter.

Assigning a button function for channel 1

1. Briefly press the P button (programming button) on the receiver. The LED will begin to light up.
2. Press the desired button on the hand transmitter for at least three seconds until the LED goes out.
3. Release the button. The receiver is ready to receive

Assigning a button function for channel 2

1. Briefly press the P button (programming button) on the receiver. The LED will begin to light up.
2. Press the P button again. The LED will go out and then light up again.
3. Press the desired button on the hand transmitter for at least three seconds until the LED goes out.
4. Release the button. The receiver is ready to receive

Checking programming: Press the programmed button on the transmitter. The command will be issued and the LED on the receiver will light up.

Note: There must be a distance of at least 1 m between the transmitter and the receiver. If the hand transmitter does not work, try to assign a button function to the channel again.

Note: There must be a distance of at least 1 m between the transmitter and the receiver. If the hand transmitter does not work, try to assign a button function to the channel again.

Canceling the programming procedure:

- If no programming is performed within 60 seconds after the P button is pressed, the receiver's LED will go out.
- If you press the P button three times in a row, the receiver's LED will go out and the programming procedure will be cancelled.