



ALLO
REMOTECONTROL

INSTRUCTIONS

CHAMBERLAIN TX4UNIS

Step 1: Press and hold for about 5 seconds the left and right buttons of the remote control simultaneously. The LED of the remote control begins to flash continuously.

Step 2: Press the Learn button on the garage door opener briefly. The LED will light up for about 30 seconds. Now, the remote control can be programmed.

Step 3: Select one of the four buttons of the remote control and press. If the opener's light flashes 1x, perform step 4. If not, press the selected button repeatedly until the opener's light flashes 1x. Then perform step 4.

Step 4: Press one of the three remaining buttons of the remote control button to end the programming. The LED of the remote control goes off. Delete remote control: The deletion of the remote control is described in detail in the manual of the opener. Usually the Learn button on the opener is pressed and held for at least 10 seconds. Then ALL handheld transmitters that were programmed on the opener are deleted.

Visit our website: www.alloremotecontrol.com