


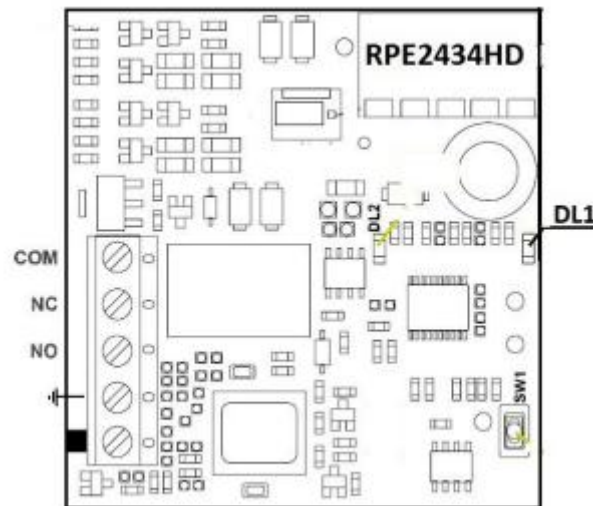

DIAGRAM

Programming the remote control on the receiver RPE2434HD:



1. Power up your receiver
2. Press and hold the button P1 of your remote control until the LED DL1 of your receiver turns on (approx. 15 seconds)
3. Release the button. Your new remote control is now programmed

NOTE: The button P3 of your working remote control activates the channel 2 of your radio receiver.

How to program additional transmitters?

1. Use the remote control that you have already programmed on your receiver
2. Press the button P1 on your remote control until the LED DL1 flashes (approx. 10 seconds)
3. Release the button
4. Take your new remote control and press the button p1 until the LED DL1 turns on (and remains fixed for approx. 10 seconds)

Deleting the memory: Press the button SW1 until the LED LD1 turns on then release. The memory has been deleted.