



ALLO
REMOTECONTROL

INSTRUCTIONS

ECOSTAR RSE 2

1. Press briefly the button located on the bottom of the motor
2. The LED flashes slowly
3. You have 20 seconds to program in your new remote control
4. Press any button on the remote control
5. The LED flashes more rapidly
6. Press a second time that same button on the remote control
7. The LED flashes faster
8. Release the button on the remote control
9. Your new remote control is now programmed

Visit our website: www.AlloreMOTEcontrol.com