




EasyControl EC411

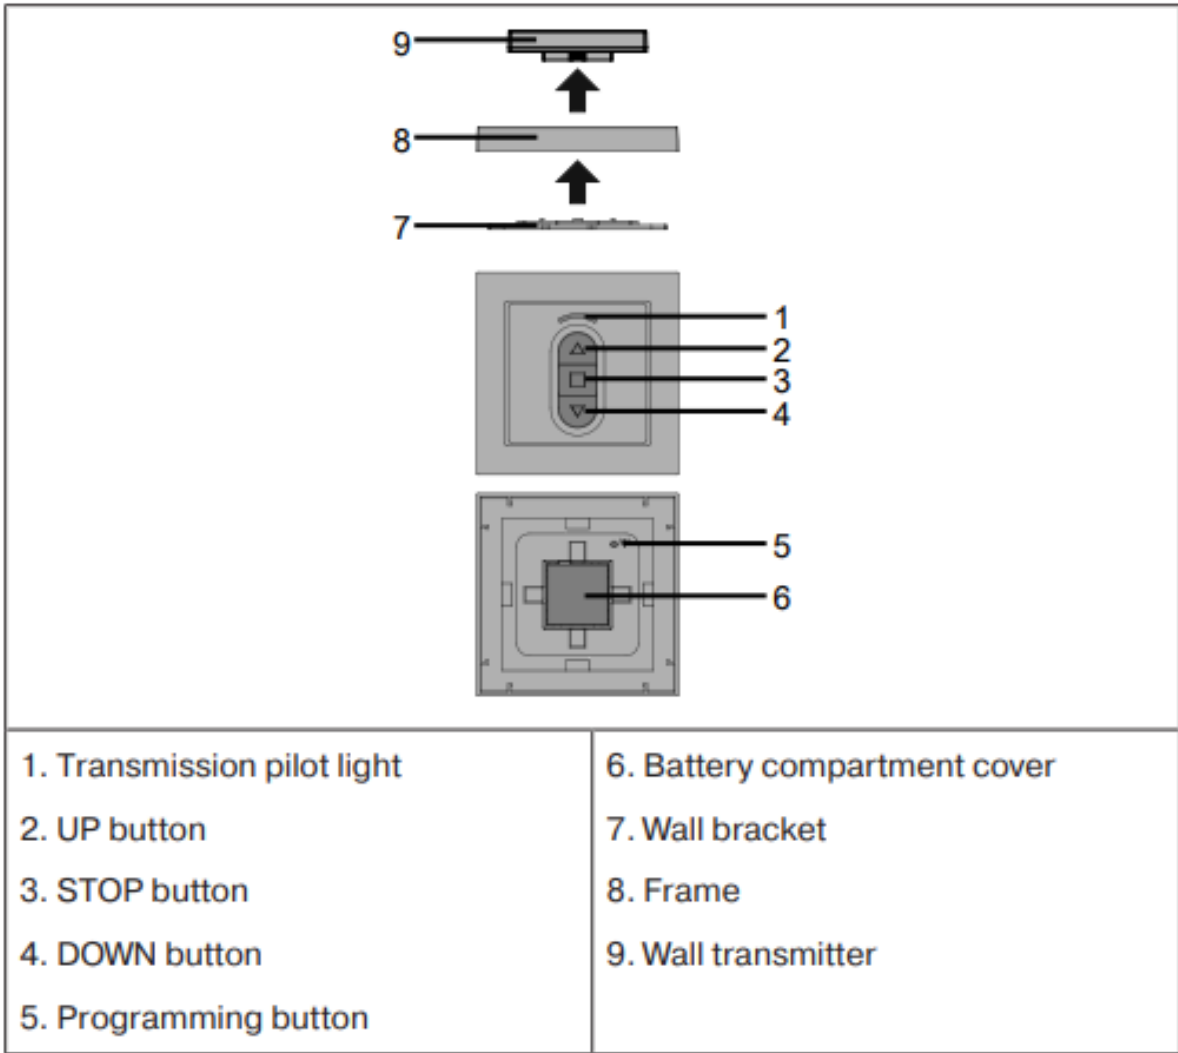

Switch off the receiver power for 5 seconds, then switch it back on
Or operate the programming button or the radio switch on the receiver
The receiver is now in programming mode for 3 minutes

Programming the master transmitter:

Press the programming button on the master transmitter whilst in programming mode until the receiver confirms that programming was successful

The programming process is now complete

Programming additional transmitters:

Press the programming button of the master transmitter until the receiver confirms

Then press the programming button of the new transmitter until the receiver confirms

Press the programming button of the new transmitter again

The receiver confirms successful programming

Installing the wall bracket:

