



ALLO
REMOTECONTROL

INSTRUCTIONS

HR A433/A868/AQ2640/R433/4868/RQ2640

Programming from an already activated transmitter:

1. Press the two buttons of the new remote control. Release the buttons
2. Press again the 2 buttons on the new remote control
3. The LED on the new remote control blinks fast 3 times
4. Press the first button on the new remote
5. The LED flashes once
6. Release the button
7. Take your old remote control and place both remotes next to each other
8. Press the first button on the original remote
9. The LED flashes quickly, then slowly 3 times
10. Wait a few seconds, the new remote control blinks once
11. The first button of your new remote control is now programmed
12. To program the second button, press both buttons simultaneously 2 times
13. Press the second button on the new remote control
14. Press the second button on the old remote control

Visit our Website: www.alloremotecontrol.com