




Jane F

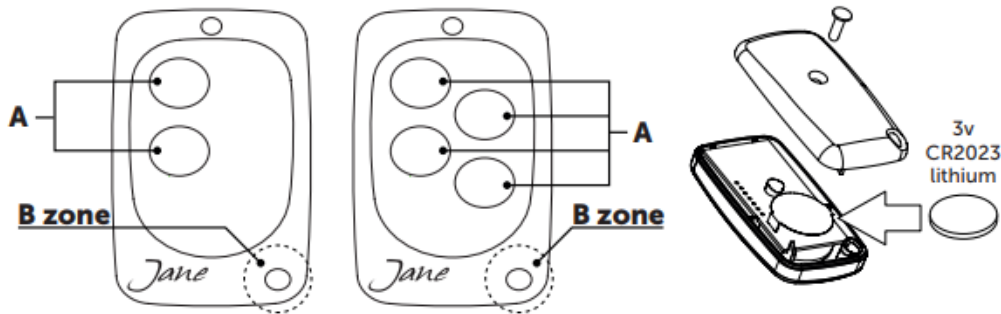

- Place the original remote pointing the B area of Jane F
- Press and hold one of the A button, that you want duplicate
- After 6 seconds, the blue LED starts to flash, entering in clone mode
- When the blue LED flashes, press and hold the channel's button of original remote and wait till Jane's blue LED stops to flash and becomes fixed

When the blue LED becomes fixed it means that the original code has been cloned and transmitted from original remote into Jane F.

- Then, the blue led remains steady for 2 seconds and then it turns off
- Release the A button and the button of the original remote
- Then duplication is complete

To duplicate the code from a second channel choose another A button and repeat the operation.

If the blue LED after flashing turns off, it means that cloning process is not active and it maintains the original code or the code previously duplicated.

Repeat then the operation, pressing the button of external remote immediately after the blue LED starts to flash