



KEY TXB - TXB 42 - TXB 42N - TXB 42R - TXG 44 - TXG 44R

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the button S. The LED light (Ir1) on the receiver illuminates. Release the button.
3. Press the button P. The LED light on the receiver blinks once. Release the button.
4. Press a button on your new remote control. Keep it pressed down. The LED light on the receiver blinks. Let the button go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

