



NICE Code keypad- digicode radio MOTXR

This function allows you to change the combination associated with channel 1 ◀

1.Press the "0" key and hold it down while pressing and releasing ◀	0 ◀
2.Release the "0" key.	
3.Type in the current (original) combination and press ◀	11 ◀
4.Type in the new combination (up to 8 digits) and press ◀	070576 ◀
5.Type in the new combination again and press ◀	070576 ◀

Tab. B Changing the combination associated with channel 2 ▶ Example

This function allows you to change the combination associated with channel 2 ▶

1.Press the "0" key and hold it down while pressing and releasing ▶	0 ▶
2.Release the "0" key.	
3.Type in the current (original) combination and press ▶	22 ▶
4.Type in the new combination (up to 8 digits) and press ▶	28111076 ▶
5.Type in the new combination again and press ▶	28111076 ▶

NOTE 1: If the two combinations you have entered are identical, once you have entered the combination you can press either ◀ or ▶.

NOTE 2: If combinations are set without entering any number, the security system is effectively overridden and the command can be transmitted simply by pressing ◀ o ▶ without having to first enter a combination.