



### NICE HSDID11- Opening detector

01. Select the zone to assign the detector to: "Alarm zone A", B, C, D, E, F.
02. Select the detector: touch "Add 1 detector".
03. Fill out all fields ( follows: Delay: Touch "Delay" and enter the alarm delay (0 Sec = alarm is sent immediately). This delay gives the user time to enter the home and disarm the alarm without tripping the detector. Confirm with "OK". Name: Touch "Name" and enter the detector's name (e.g.: "kitchen"). Confirm with "OK". Voice name: Touch "Voice name" and record the name of the detector (e.g.: "kitchen").
04. Confirm with "OK".
05. Touch "OK" again and fit the battery into the detector. The control panel beeps to confirm (3 beeps indicate that the detector is already present).
06. Press "OK" to save the settings.

#### **Modifying or deleting an existing detector:**

01. Select the detector you wish to modify or delete.
02. To modify it, select "Display" and proceed as indicated in par. 6.4.4.
03. To delete it, select "Delete" and confirm with "YES" and "OK". The control panel beeps to confirm and displays a confirmation message. Press "OK" to return to the "Alarm Zones" menu.