



ALLO
REMOTECONTROL

INSTRUCTIONS

NICE HSKIT1GWFR Home Alarm system kit - Keypad

The procedure assigns a keypad with the control panel. This enables the user to totally/partially arm and disarm the system, using the various "access codes" already programmed on the keypad (do not use the installer code or master user code).

01. Insert the batteries into the keypad (pull out the separation tab); a beep is emitted and all LEDs flash for 60 seconds.
02. Within 60 seconds use the touch screen to arm and then immediately disarm the system using a valid access code (when you disarm it, it will beep 6 times to confirm).

Visit our Website: www.alloremotecontrol.com