



ALLO
REMOTECONTROL

INSTRUCTIONS

Novoferm E41/43-U

- 1, Press the learning button on receiver until the LED flashes
- 2, then hold button on transmitter down for approx. 3 seconds until the LED on the receiver flashes rapidly.
- 2, Repeat this procedure for any further hand transmitters, up to 60 transmitter codes can be taught in. (the receiver can memorise 60 pcs remotes)
- 3, If the transmitter coding switches, not all switches should be in the same setting (the receiver will not accept this for safety reasons)

Deleting hand transmitter codes on the receiver:

Press the receiver button until the LED stops flashing

(it is not possible to delete individual hand transmitter codes)