 
 





ROGER E80 TX52R/ TX54R

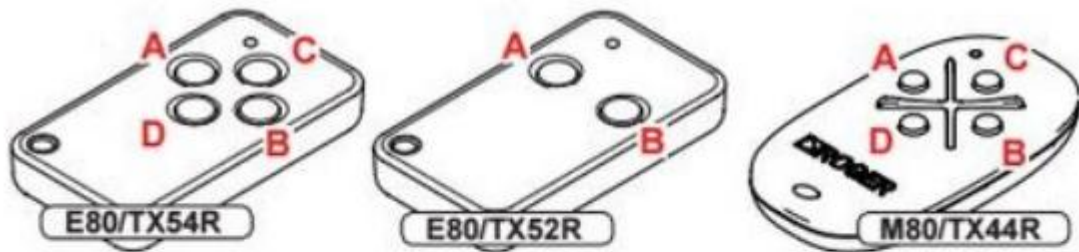

New remote control

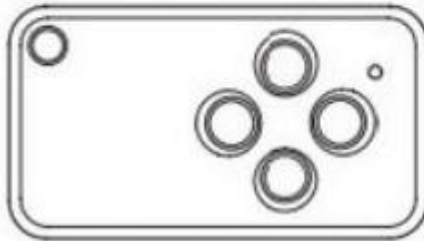

 Old transmitter

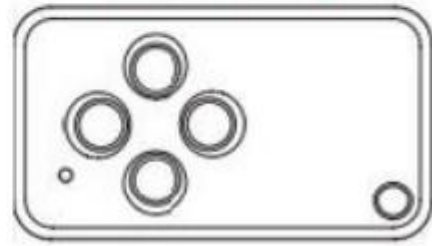

Programming from an already activated remote control:

1. Press simultaneously on the buttons A and B or C and D
2. The LED blinks for 5 seconds then remains fixed
3. Press and hold the button you would like to program and release the other button
4. The LED blinks slowly 3 times, the LED blinks briefly
5. Place the 2 remotes head to head and press the button on your original remote control
6. The LED will flash for a second then comes off
7. Your new remote control is now programmed

Programming on the receiver:

1. Open your receiver and find your radio card, briefly press the P1 button where you want to program your transmitter
2. The LED of your radio card blinks 3 times
3. While the LED is blinking, press the button on your remote control that you want to program
4. Release the button
5. The LED goes on blinking 3 times

Visit our website: www.Alloremotecontrol.com