




### SEA remote control

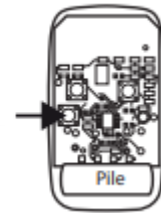

1. Draw near your gate system (1 to 2 m)
2. Open your old transmitter which must be in good working order
3. Press the hidden button
4. The receiver is now in learning mode (10 seconds)
5. Take your new remote control and press and hold for 5 seconds all the buttons
6. Your new remote control is now programmed