



V2 PHOENIX, HANDY, PHOX, TSC4 and TXC4

1. Using a cross-head screw take off the screw at the back of your old remote control
2. Place both remote controls head to head (2 cm)
3. Open your old remote control and locate the hidden button (above the battery)
4. Press the hidden button
5. The LED of your remote control flashes
6. Now, press the button you want to program for operating your system
7. The LED will come off
8. Press and hold the button on the new remote control
9. The LED of the already activated remote control flashes
10. Your new remote control is now programmed (You can repeat the same procedure to program the other buttons)

Procedure for direct programming of the receiver:

1. Open the receiver and look for a small SW1 key
2. Press this key, until the LED of the receiver comes on
3. Within 5 seconds, press the key of the remote control you want to programme until the LED of the receiver flashes.
4. After several seconds, the LED of the receiver will go off that way coming out of programming mode
5. The code has been memorised