



ALLO
REMOTECONTROL

INSTRUCTIONS

WAYNE-DALTON

Activating the Transmitter

1. Press and hold the large transmitter button. The red LEDs will blink rapidly.
2. After 2 seconds, the red LEDs will turn on continuously, indicating a successful activation. Release large button.
3. The code for this transmitter has now been activated.
4. You must now program this transmitter to the garage door operator. See "Transmitter Programming"

Transmitter Programming

NOTE: Any of the three transmitter buttons can be programmed to activate the door. In multi-door installations, each button or a combination of two buttons pushed at the same time can be programmed to activate a separate door. Only one button at a time can be programmed to activate a door

Visit our website: www.Alloremotecontrol.com