

INSTRUCTIONS

HÖRMANN FCT3BS

NOTE: Always wait for the light of the keypad to be off before starting new program operations. Make sure that the antenna of the operator is fully extended and guided away from any metal.

Learning the keypad to the operator: (out of the box or after a factory reset)

- Press and release the "P" button on the operator; don't keep it pressed for more than half a second.
- Have a distance of at least 5ft from the operator.
- On the keypad, press and release slowly in sequence 1 2 3 4 [Key]. After this 1 2 3 4 [Key] will open / close the door. Test the function. With a second or third operator do the same but with the codes 2345 or 3456

Change first access code: (wait for the keypad light to be off before starting)

- Press and release the [Key] button.
- Enter 1 2 3 4 [valid access code]
- Press and release the [Key] button.
- Enter a new access code (4 digits).
- Press and release the [Key] button

After this the new code followed by pressing the [Key] button will operate the door. Test the function.

Change second access code: (wait for the keypad light to be off before starting)

- Press and release the [Key] button 2 times
- Enter 2 3 4 5 [valid access code]
- Press and release the [Key] button.
- Enter a new access code (4 digits only).
- Press and release the [Key] button.

After this the new code followed by pressing the [Key] button will operate the door. Test the function.

Change third access code: (wait for the keypad light to be off before starting)

- Press and release the [Key] button 3 times
- Enter 3 4 5 6 [valid access code]
- Press and release the [Key] button.
- Enter a new access code (4 digits only).
- Press and release the [Key] button.

After this the new code followed by pressing the [Key] button will operate the door. Test the function