


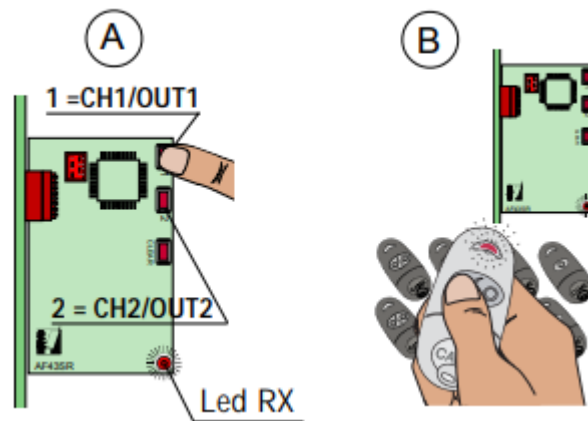

CAME AF43SR RECEIVER

1 - Press a code storage pushbutton for 2 seconds until the RX LED starts flashing (fig. A);
2 - Press the pushbutton of the transmitters to be saved (fig. B), one after the other (see Note 1 on the reverse): with every press of the pushbutton, the RX Led comes on; If necessary, repeat 1 and 2 for the other outlet.

Then complete the saving on the board (or on RBI/RBE) by consulting the related documentation



1 - Press the pushbutton of an already saved transmitter, until (about 15") the TX LED stays on (fig. C);
2 - Within 20 seconds, press a pushbutton of the transmitter you want to add (fig. D). Wait 20 seconds before using it! Repeat C and D for all the transmitters you want to add (up to a maximum of 25 per receiver).

