




MARANTEC R 868 343 73296 Receiver

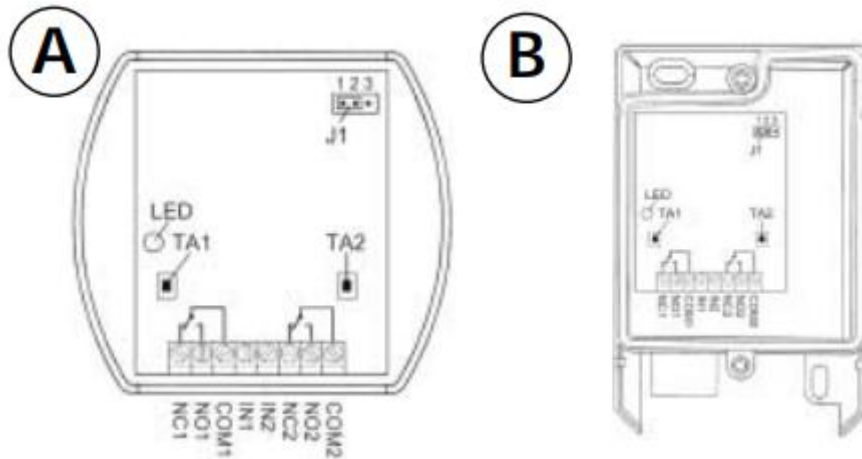

1. Remove housing cover
2. Adjust hand transmitter to channel 1/channel 2
3. Actuate the button TA1/TA2 for approx. 3 seconds
4. The LED will flash
5. Press the desired button of the hand transmitter within 10 seconds
6. As soon as the receiver has saved the transmitter code. The LED flashes quickly for approx. 2 seconds
7. Put back the housing cover