




TELCOMA EDGE

4

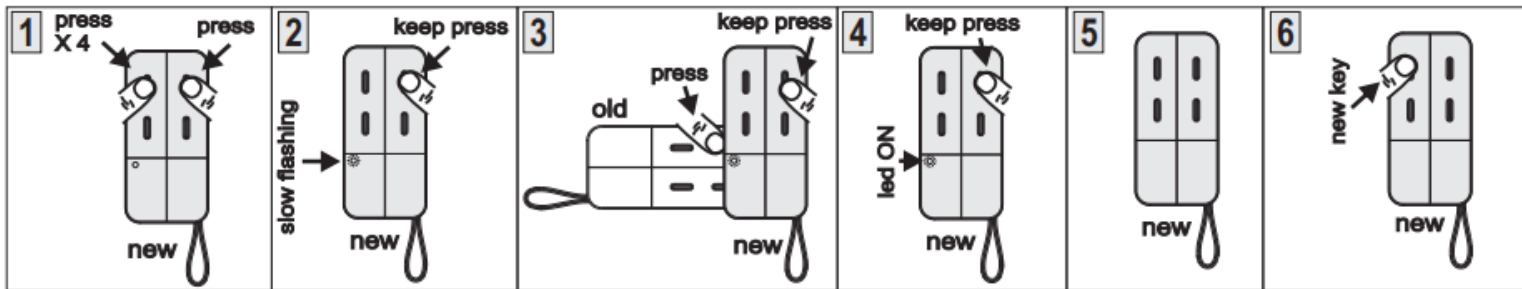

PROCEDURE FOR COPYING A CODE BETWEEN TRANSMITTERS:

In this procedure it is important to keep the RIGHT (2nd ch) button pressed from point 1 to point 4 inclusive.

- (1) Put the NEW TRANSMITTER in the programming mode by keeping the RIGHT (2nd ch) button pressed and pressing the LEFT (1st ch) button 4 times.
- (2) The NEW TRANSMITTER LED blinks slowly.
- (3) Approach with the TRANSMITTER to be copied (old), as shown in the figure, and transmit the channel to be copied.
- (4) The NEW TRANSMITTER LED lit up.
- (5) Release the button of the NEW TRANSMITTER.
- (6) Press the button on the NEW TRANSMITTER to which the new code is to be assigned and only release it when the LED has come on.