


## Manual

### *How to Programme your REMOTE CARDIN S449 QZ2 – S449 QZ4 – S449 QZ4M – S486 QZ2 – QZ4*

How to program your new remote control:

There are different methods for programming your new remote control.

- [From a remote control that has already been programmed:](#)

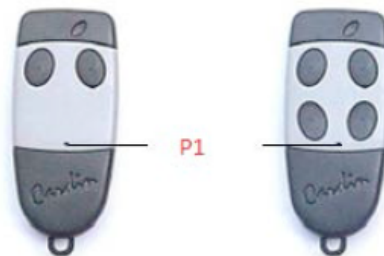


1. Approach your motor so you are standing a few feet away from it.
2. With a sharply pointed object, press the hidden button from your already-programmed remote control (diagram above, P1). The receiver emits a beep. Let the button go.
3. Press a button on your already-programmed remote control. The receiver emits a beep. Let the button go.
4. Press the button you wish to program on your new remote control. The receiver emits 2 beeps. Let the button go.
5. Repeat this procedure for each button you wish to program.
6. Wait 10 seconds.
7. Your new remote control is programmed.

- [From a receiver without digital screen :](#)



1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board (diagram above), press the programming button (MEMO). Keep it pressed down. The LED light of the receiver blinks.
3. While keeping pressed down the button MEMO, press the button you wish to program on your new remote control until the LED light of the receiver turns off.
4. Let the buttons go.
5. The LED light of the receiver blinks.
6. Press the button on your new remote control again. Let it go.
7. The LED light of the receiver turns off.
8. Repeat this procedure for each button you wish to program.
9. Wait 10 seconds.
10. Your new remote control is programmed.

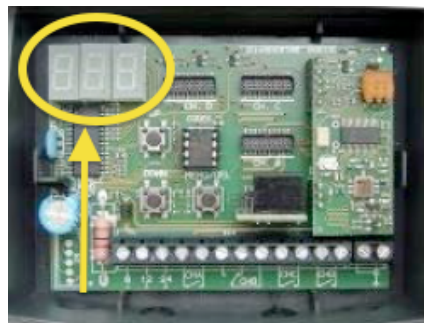

- [From a receiver with digital screen :](#)

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board (fig), with the aid of the UP and DOWN buttons you select an available number. A point at the bottom right means that the place is taken. If there is no point you can stop on this position for programming the new remote control.
3. Once you find an available position, press the programming button (MEMO/DEL). Hold the button. The display shows MEM.
4. Hold the button MEMO/DEL and press the button you wish to program on your new remote control. Always holding the button MEMO/DEL, let the button on your new remote control go and press a second time the same button on your new remote control. The display shows a letter belong to the programmed button.
5. Let the button go.
6. Your new remote control is programmed.